




Bulk Density ASTM D 1895

Standards

ASTM D 1895, Method A, Method B, Method C

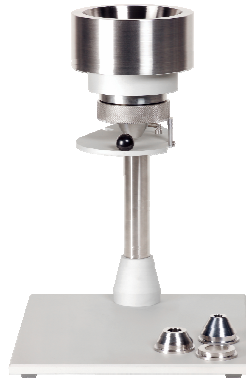

Application

Measuring system for determination the bulk density of free flow powder or granulate. The test can provide a gross measure of particle size and dispersion which can affect material flow consistency and reflect packaging quantity.

Features

Method A	Method B	Method C
<ul style="list-style-type: none"> ▪ Used for fine granular material ▪ V shaped measuring funnel ▪ Capacity of the measuring cup 100 cm³ ▪ Stand with funnel shut off 	<ul style="list-style-type: none"> ▪ Used for more coarse granular material than in method A ▪ V shaped measuring funnel ▪ Capacity of the measuring cup 400 cm³ ▪ Stand with funnel shut off 	<ul style="list-style-type: none"> ▪ Used or flakes, strands, chips and cut fibres ▪ Measuring cylinder 1000 ml capacity ▪ Weight plunger for compressing the material ▪ Lead shot